




CHAIN
SUMMER

CHAIN SUMMER



SWAROVSKI ELEMENTS

Article	Product Group	Article No.	Amount	Size	Color	Color Code
	Beads	5328	8 pcs.	4 mm	Light Azore	361
	Beads	5328	59 pcs.	4 mm	Pacific Opal	390
	Beads	5328	49 pcs.	4 mm	White Opal	234
	Beads	5328	8 pcs.	5 mm	Light Azore	361

Supplies & Tools


Supplies
 Finished chain with lobster clasp
 Wire, black, Ø 1 mm, 30 cm
 Wire, black, Ø 0.4 mm, 500 cm

Tools
 Flat nose pliers
 Round nose pliers
 Ruler
 Side cutter
 Tweezers






Level of design: INTERMEDIATE

Have also a look at the **text instruction** at the last page!

STEP 1

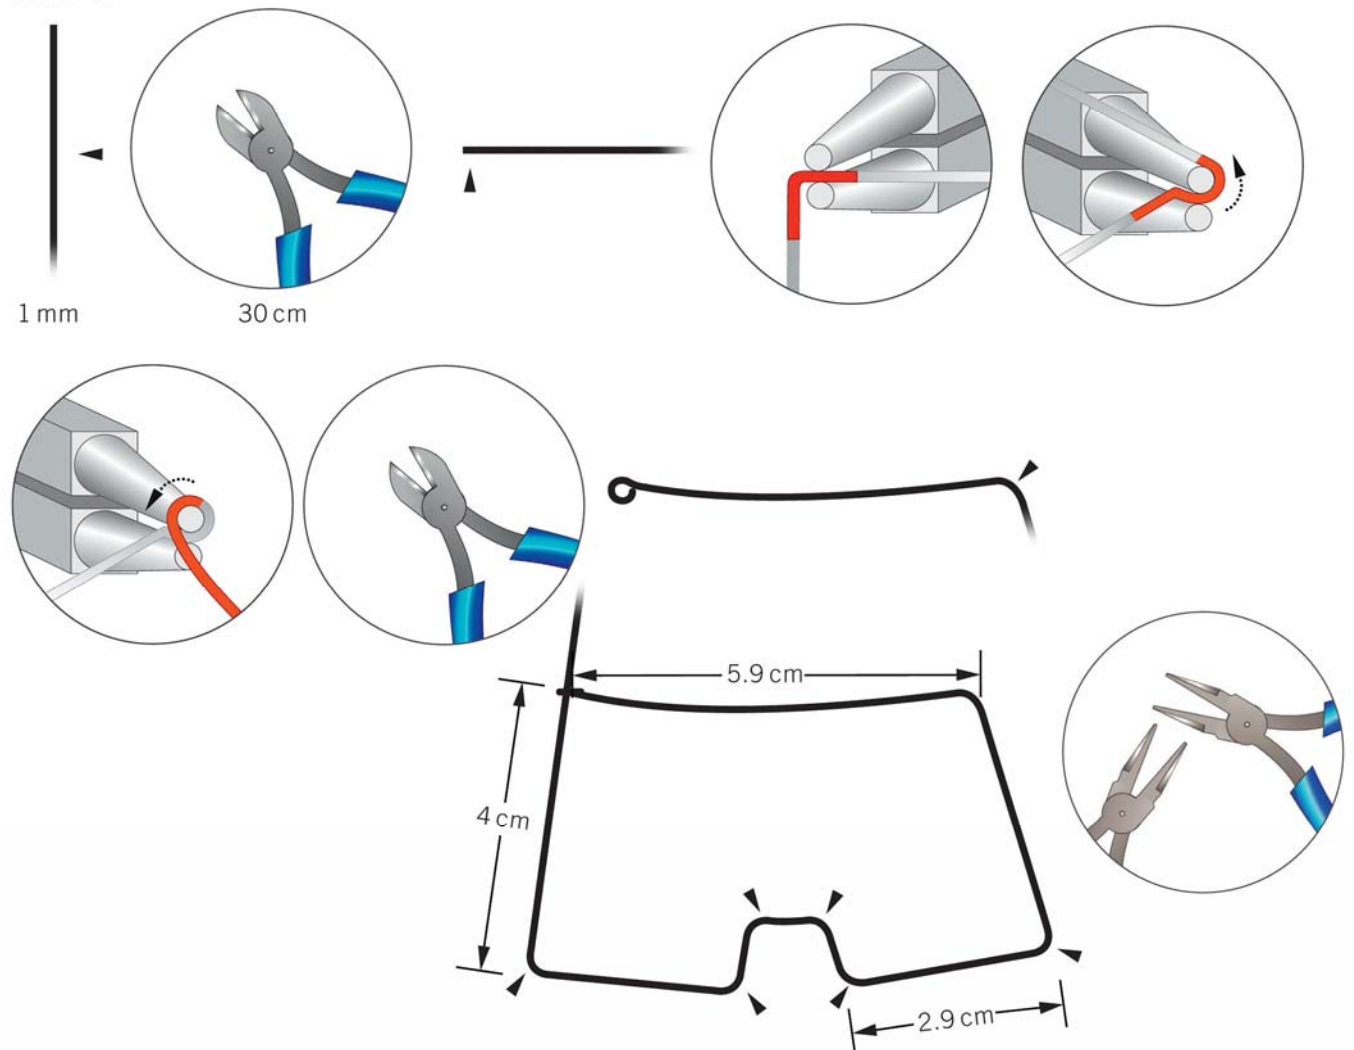

STEP 2

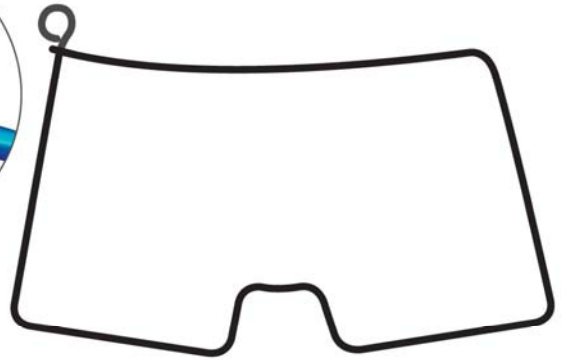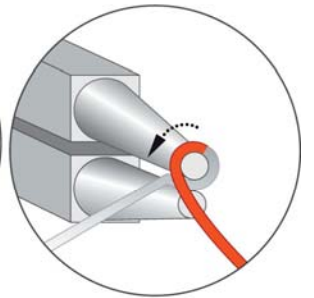
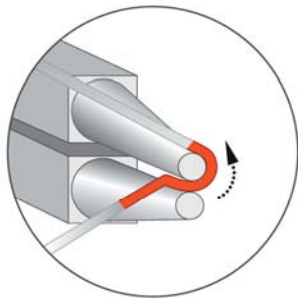
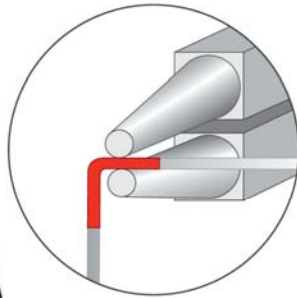
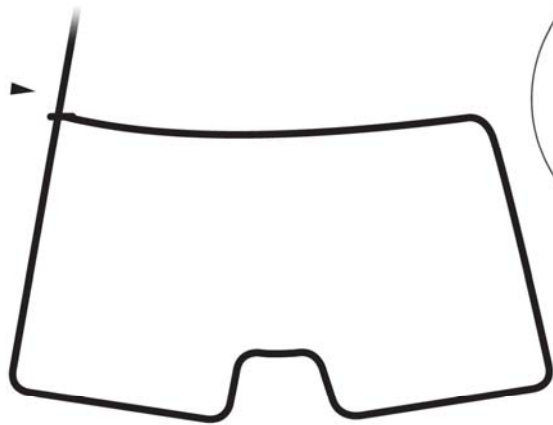


STEP 3




0.4 mm

25 cm

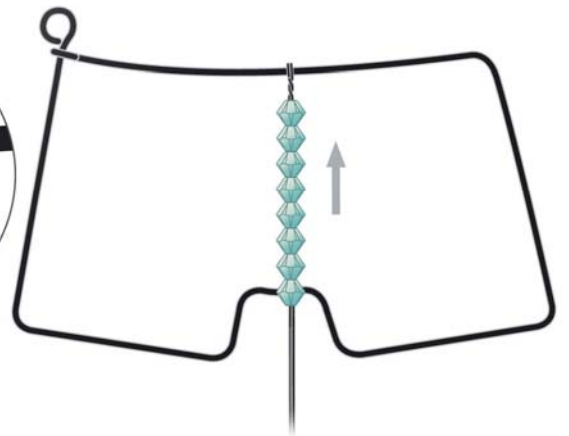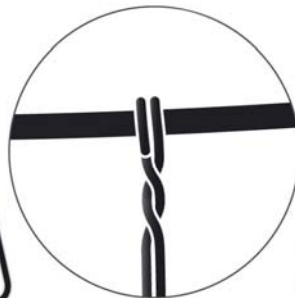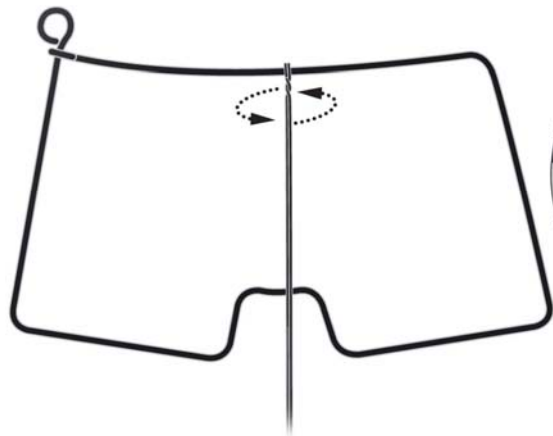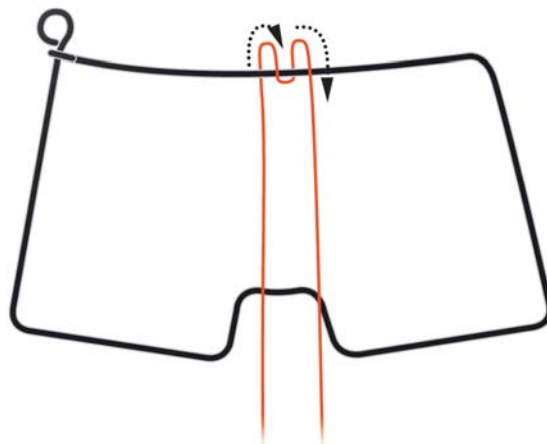


STEP 4

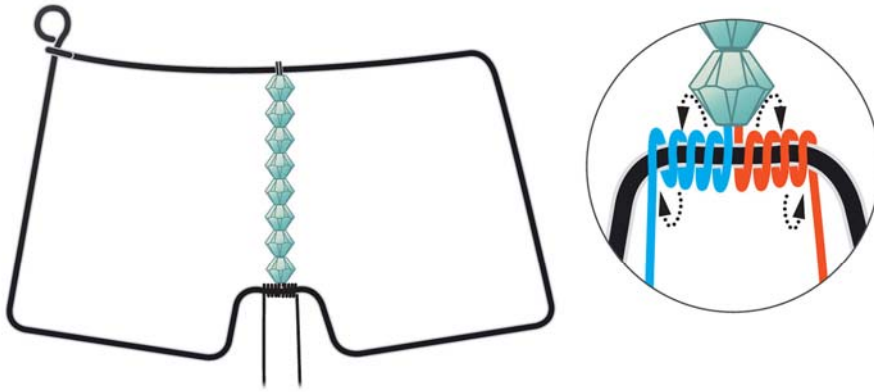


STEP 5


Repeat step 3:

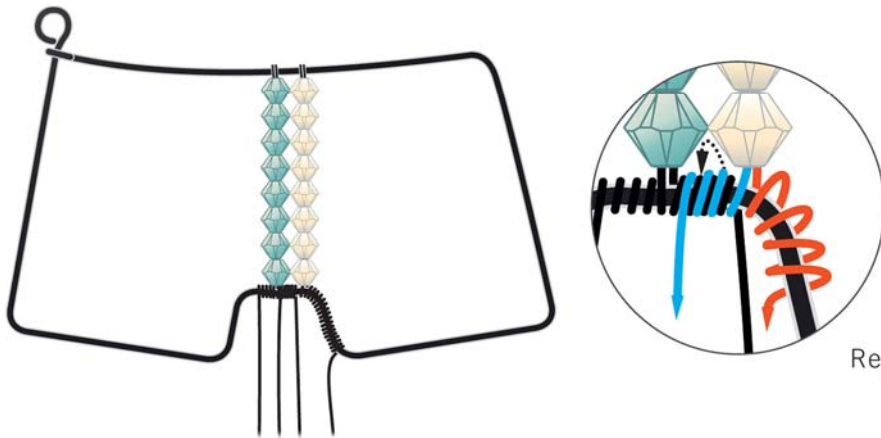


Repeat step x9

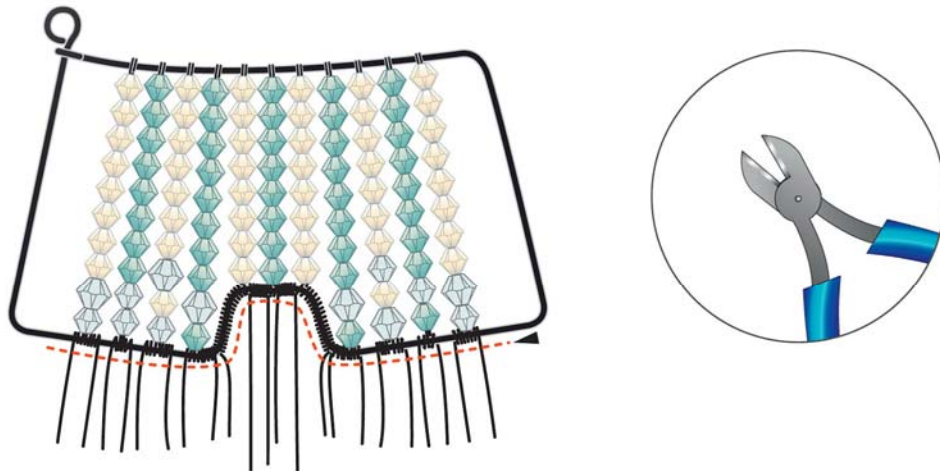

STEP 6

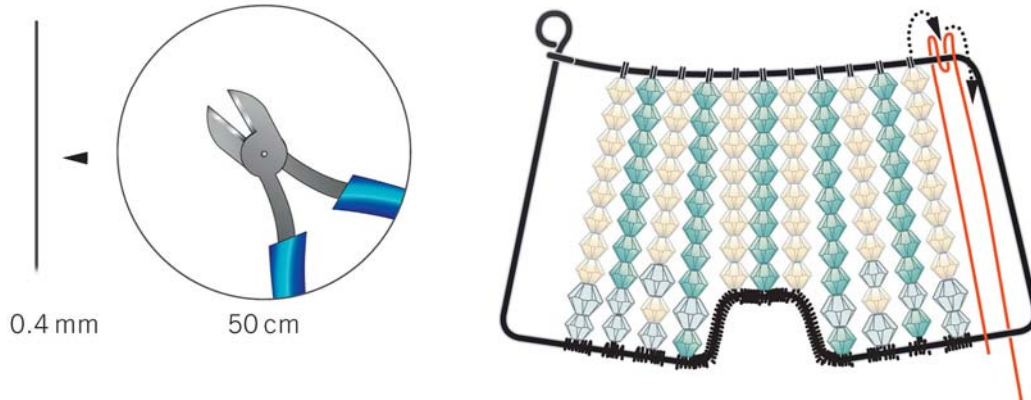


Repeat step 3 - 4:

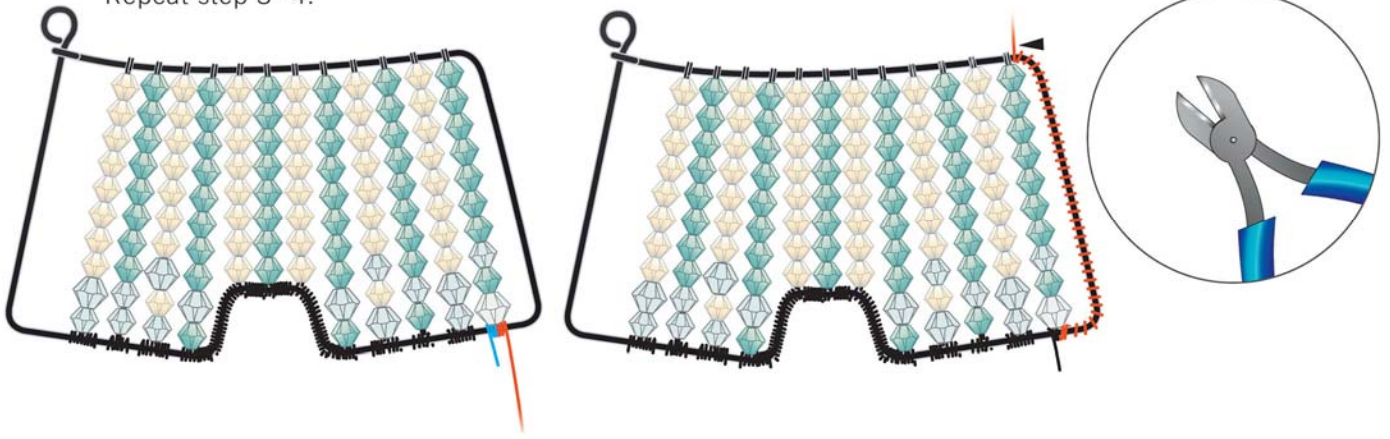

Repeat step:




STEP 7



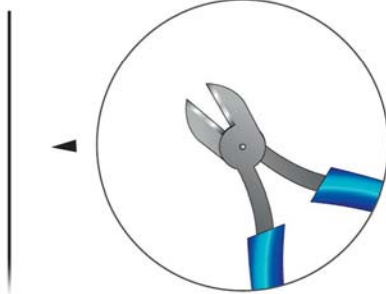


0.4 mm

100 cm

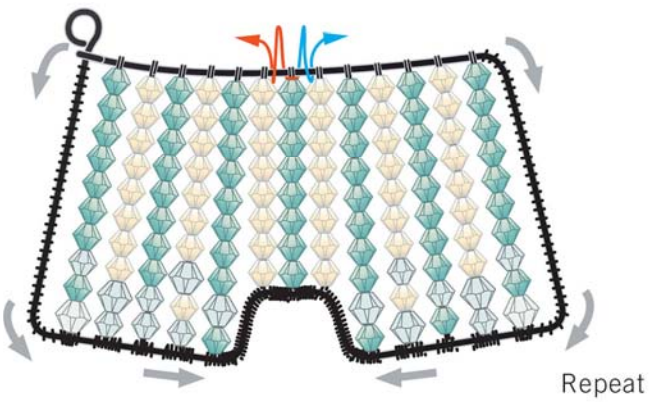

STEP 8

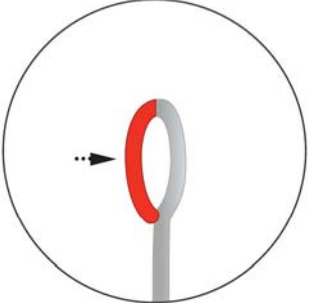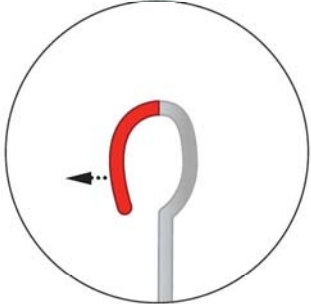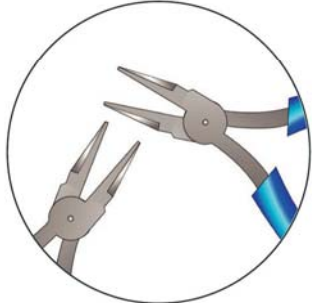

CREATE YOUR STYLE with SWAROVSKI ELEMENTS

Chain Summer

- STEP 1: Cut off 30cm of the 1 mm wire using a side cutter. Bend wire at a right angle and form a loop using the round nose pliers. Cut off excess. Bend wire using flat nose pliers as shown in illustration in order to get the desired shape. Insert wire into the loop.
- STEP 2: Bend wire to right angle and form a big loop using the round nose pliers. Cut off excess.
- STEP 3: Cut off 25cm of the 0.4 mm wire using side cutter. Bend it around trousers and twist it twice. Slide on several XILION Beads article 5328 from the SWAROVSKI ELEMENTS assortment as shown in illustration.
- STEP 4: Wrap ends around trousers, twisting one end to the right and one to the left.
- STEP 5: Repeat step 3 nine times until getting design composition using the SWAROVSKI ELEMENTS shown in illustration. Cut of excess as shown.
- STEP 6: Cut off 50cm of the 0.4 mm wire using side cutter. Bend it around trousers as shown in illustration so that you have one shorter end which is about 10cm and one longer end with about 40cm. Do not cut excess off. Repeat steps 3-4 for sliding on SWAROVSKI ELEMENTS and fixing end by wrapping wire ends around. Wrap longer end all along side length of trousers. Repeat this step for left side as shown.
- STEP 7: Cut 100cm of 0.4 mm wire and wrap one wire end on left side and one on right side all around trousers as shown in illustration.
- STEP 8: Open the loop using flat nose pliers. Insert loop into chain and close loop.

