



WIRE BANGLE
OCEAN



WIRE BANGLE OCEAN



SWAROVSKI ELEMENTS


Supplies & Tools

Article	Product Group	Article No.	Amount	Size	Color	Color Code	Supplies
	Beads	5328	4 pcs.	5 mm	Chrysolite	238	Wire, black, Ø 1 mm, 140cm Wire, black, Ø 0,6mm, 250cm
	Beads	5328	4 pcs.	5 mm	Mint Alabaster	397	
	Beads	5328	4 pcs.	5 mm	Pacific Opal	390	Tools Chain nose pliers Flat nose pliers Round nose pliers Ruler Side cutter Stick, Ø 12 mm
	Beads	5328	12 pcs.	5 mm	White Opal	234	
	Beads	5328	4 pcs.	6 mm	Chrysolite	238	
	Beads	5328	4 pcs.	6 mm	Mint Alabaster	397	
	Beads	5328	4 pcs.	6 mm	Pacific Opal	390	
	Beads	5328	12 pcs.	6 mm	White Opal	234	


Level of design: **ADVANCED**

Have also a look at the **text instruction** at the last page!


STEP 1

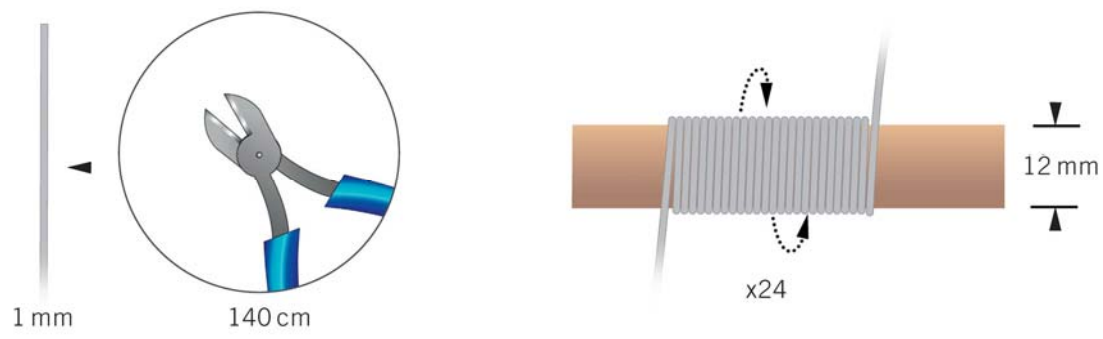


STEP 2

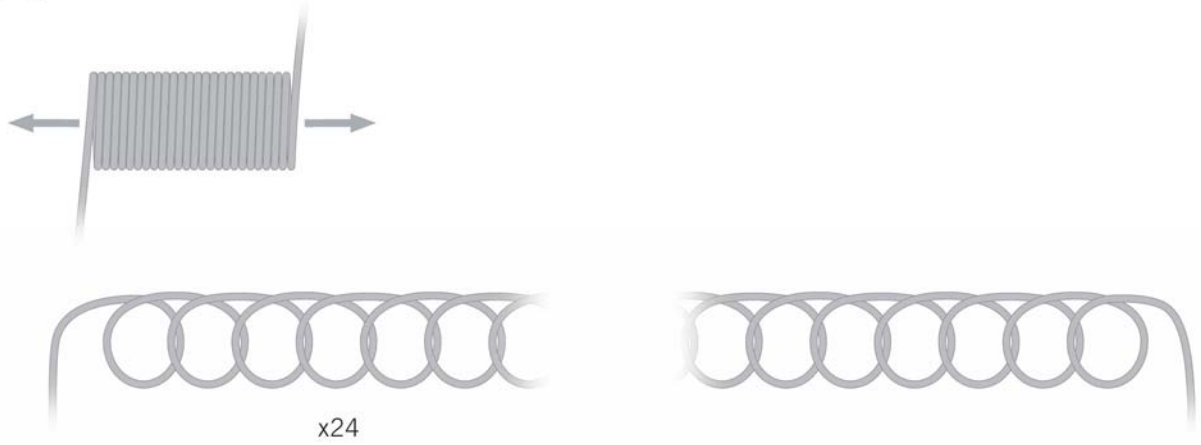



STEP 3

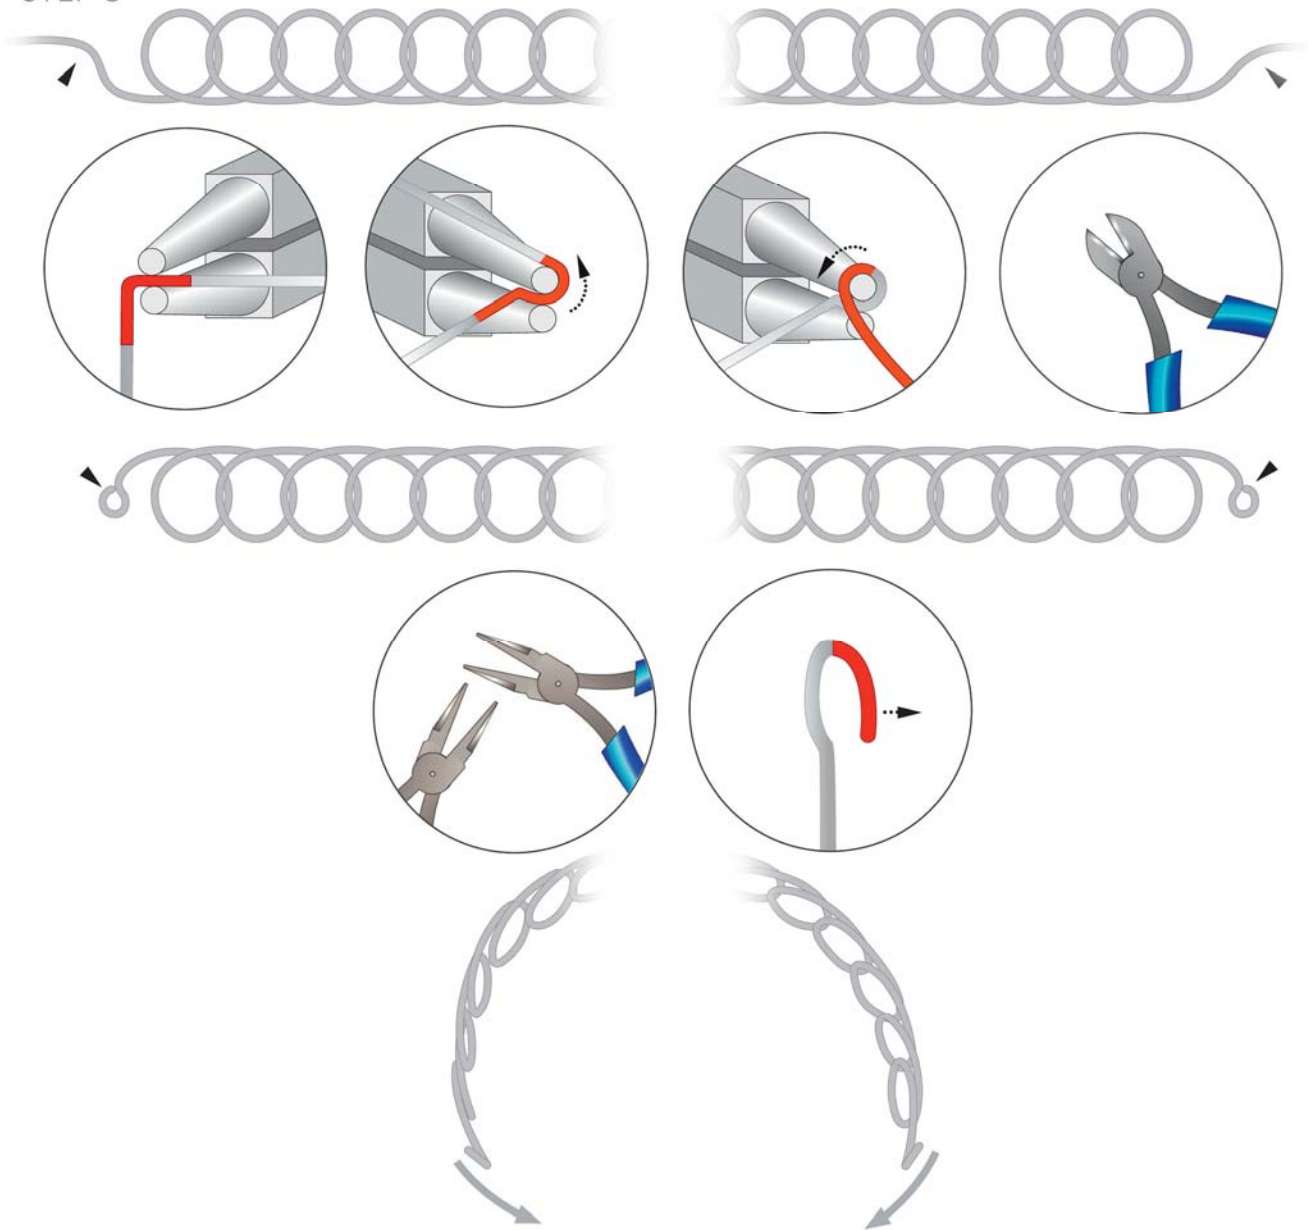


STEP 4

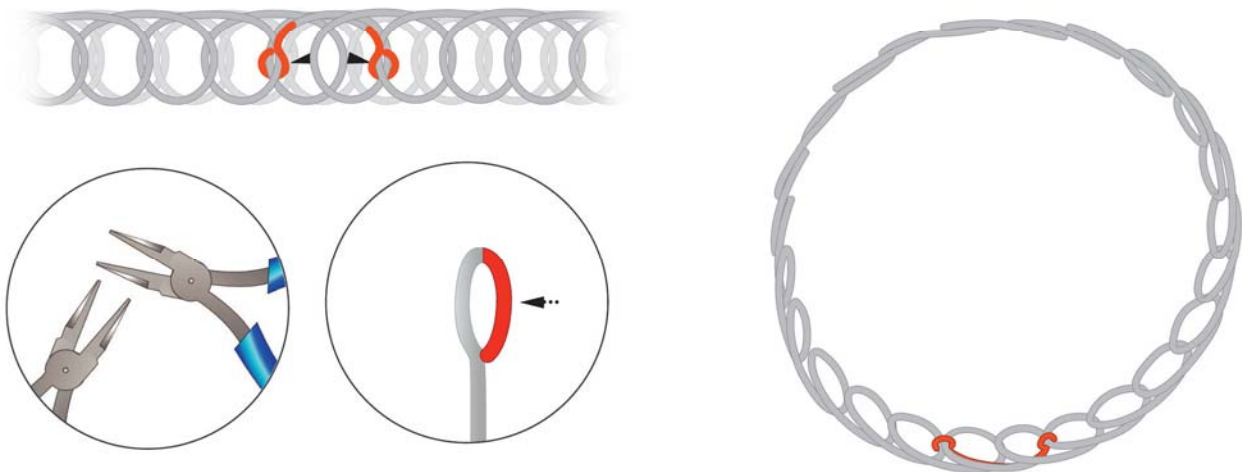


STEP 5

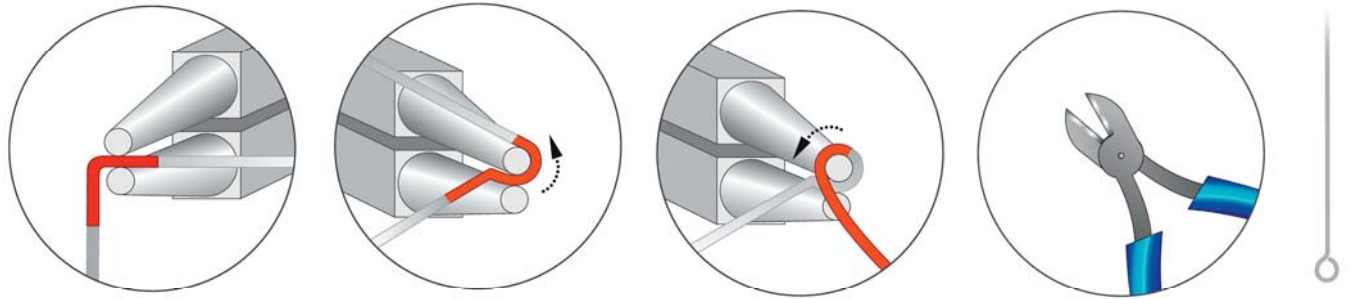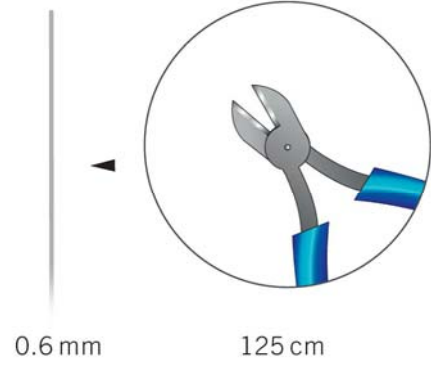


STEP 6

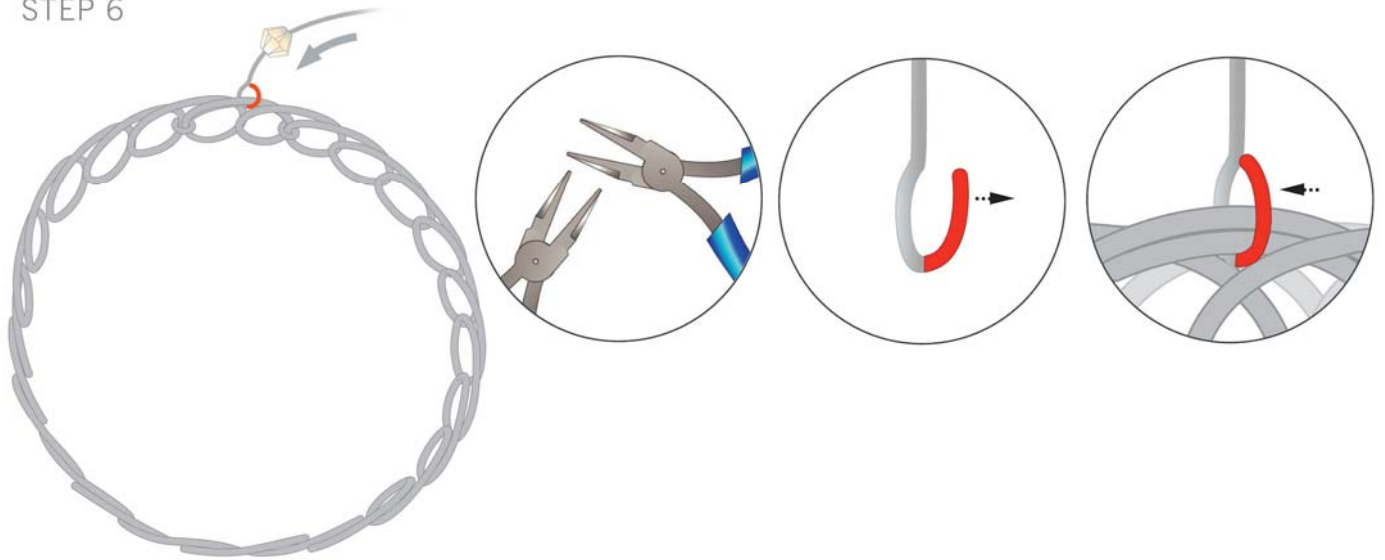


STEP 7

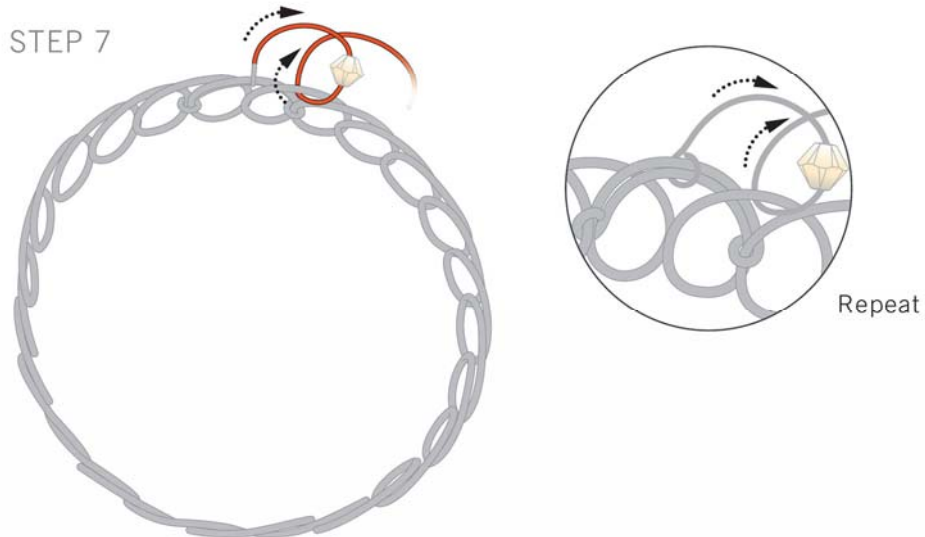

STEP 8

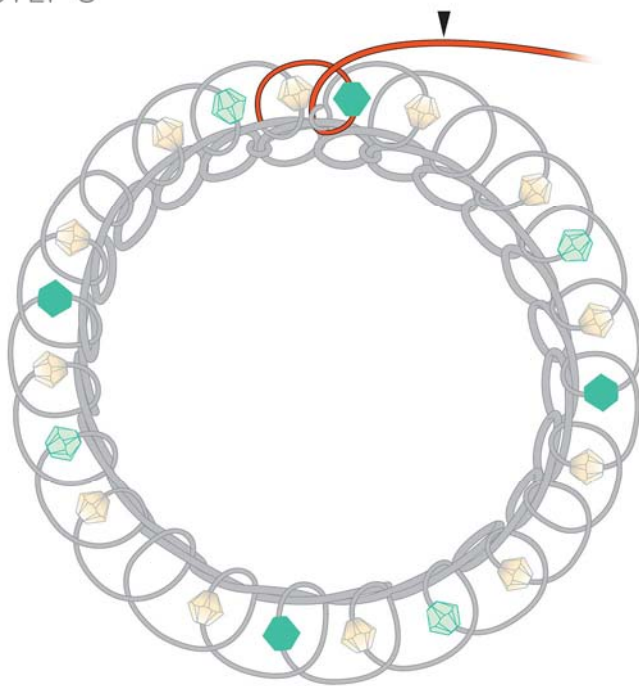

Repeat steps 5 - 6:

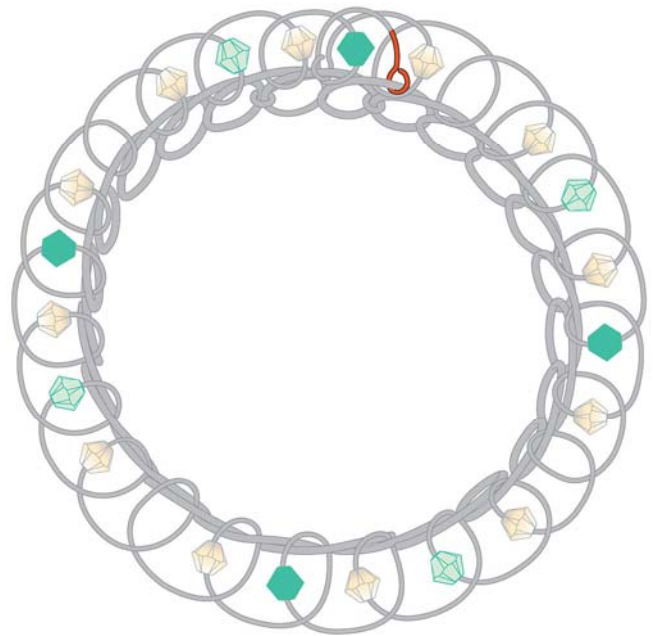

STEP 9


Repeat steps 5 - 7:



Repeat

STEP 10

Repeat steps 5-6:

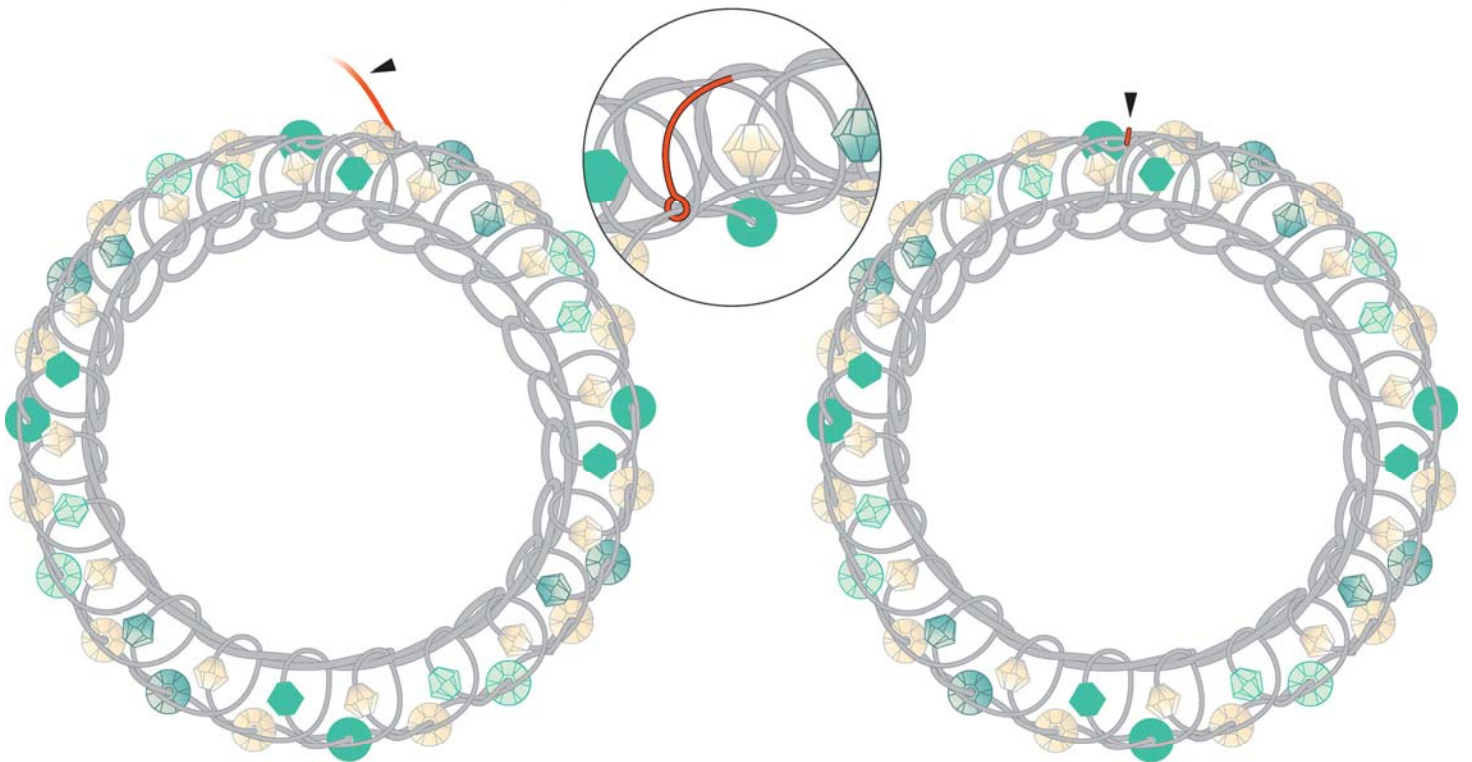

CREATE YOUR STYLE with SWAROVSKI ELEMENTS

Wire Bangle Ocean

- STEP 1: Wrap 140cm of 1 mm wire 24 times around a 12 mm diameter stick.
- STEP 2: Remove stick and pull the wrapped wire apart as shown in illustration.
- STEP 3: Cut off the wire ends using a side cutter leaving half a loop on both ends. Bend wire at a right angle and form a small loop on both ends using the round nose pliers. Cut off excess using side cutter. Open loops using two flat nose pliers.
- STEP 4: Pull the two ends together and hook the small end loops around the larger loops of the bracelet as shown in the illustration. (You can hook them on any of the loops to make the bracelet the correct size for your wrist.) Close the loops using flat nose pliers.
- STEP 5: Cut off 125cm of the 0.6 mm wire using side cutters. Bend wire to a right angle and form a loop using the round nose pliers. Cut off excess using side cutter.
- STEP 6: Open the loop sideways using flat nose pliers. Insert it to bangle as shown in illustration and close the loop. Slide on first Swarovski XILION Bead article 5328 5 mm.
- STEP 7: Bend wire into a loop which will go through bangle as shown in illustration and repeat step until first row is complete using the Swarovski Beads article 5328 5 mm one after another.
- STEP 8: Repeat steps 5–6.
- STEP 9: Repeat steps 5–7 until second row is complete using the Swarovski Beads article 5328 6 mm one after another, looping the wire in the opposite direction for this second row.
- STEP 10: Repeat steps 5–6 to secure the end of wire to bracelet.